

DIGIGUARD


# VIDEO ENTRY SYSTEM

Indoor Monitor Outdoor Station Power Supply

**Villa kit**  
Video Entry System


DIGIGUARD

CE FC RoHS 

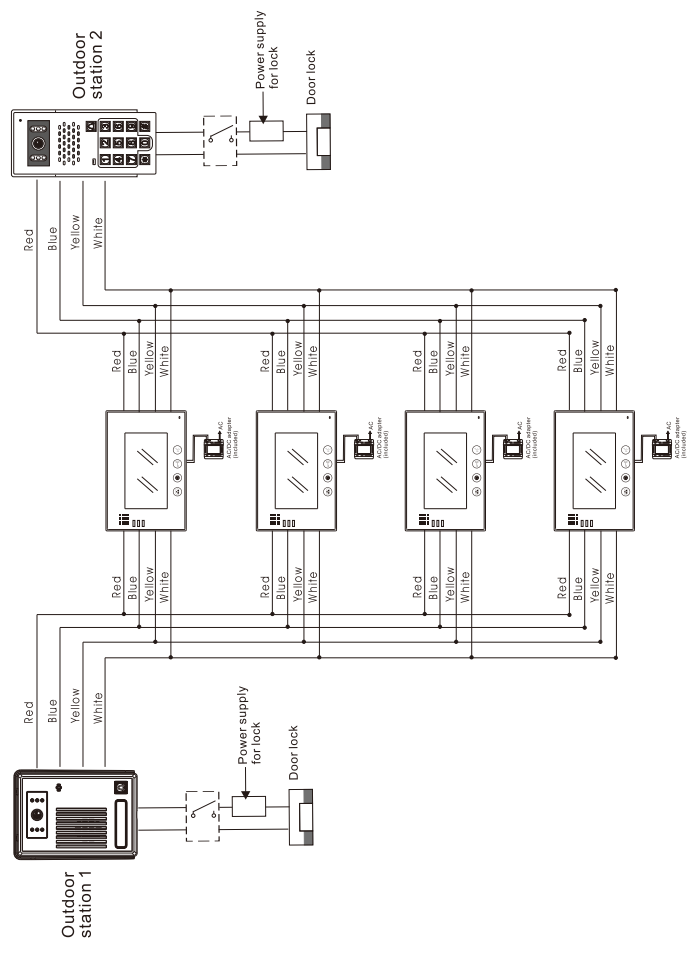


# ▶ OUTDOOR STATION

## ■ C741

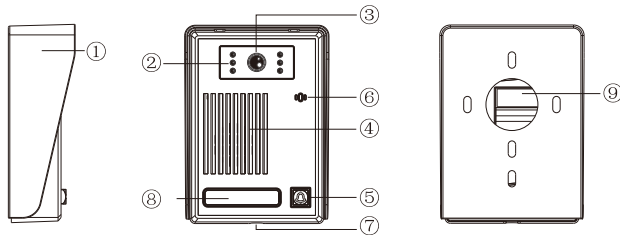


Dimension: 97x130x43mm

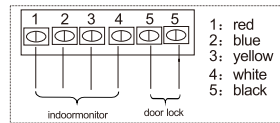


1: red  
2: blue  
3: yellow  
4: white  
5: black

## ■ C742

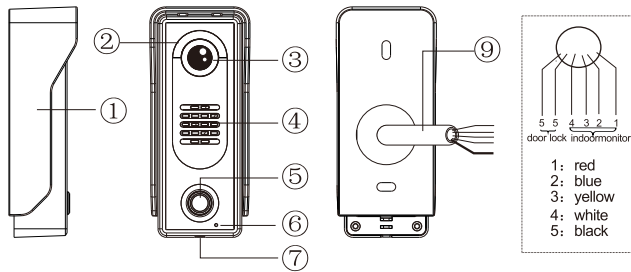


Dimension: 58x135x39mm  
2

## ■ C743

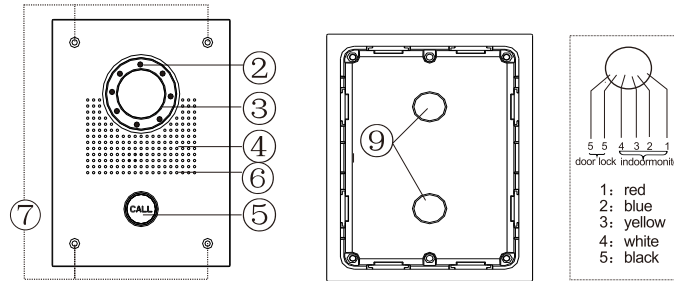

Dimension: 203x150x43mm


## ■ C743KP

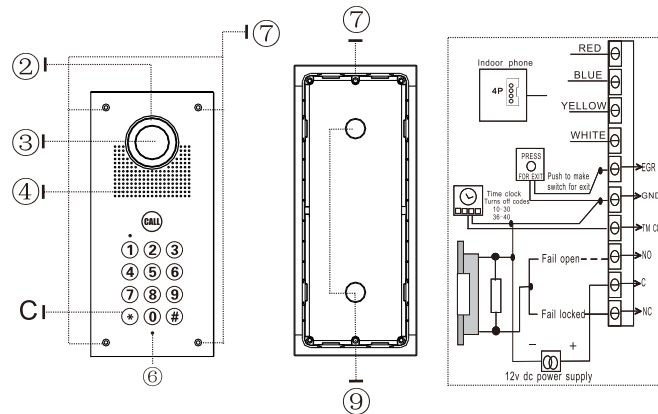

Dimension: 250x120x43mm

EGR=egress button

## ■ C741KP

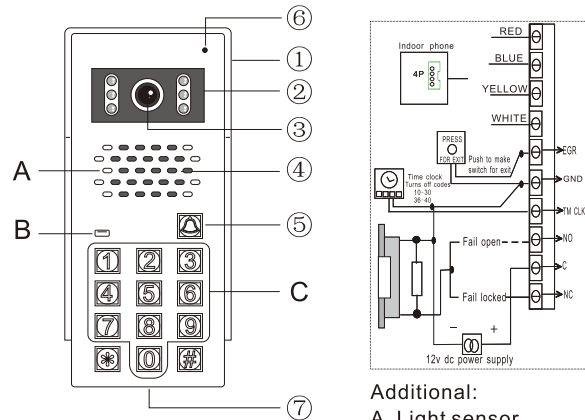

Additional:  
 A. Light sensor  
 B. LED indicator  
 C. Keypad access

Dimension: 78X185X60(mm)


NO.	NAME	DESCRIPTION
①	Water Cover	Protect the camera from outside water
②	LED Assistant	Provide lighting during night time for better visibility.
③	CCD Camera	Capture the image to sent to the monitor
④	Speaker	Sound from the monitor is delivered
⑤	Calling Button	Call the indoor phone to communicate
⑥	Microphone	Delivers and sound voice when communication with the indoor phone
⑦	Screw Hole	Install the screws
⑧	Nameplate	Show residential name
⑨	Connection wiring	Connection with the monitor

4

## Specification

Power	DC 14.5V
Electric current	Working ≤ 200mA
Camera lens	1/3 CMOS High Definition
Illumination	0.05LUX
Communication duration	120s
Communication method	Two-way
Working Temperature	-20-55°C
IP rating	55

## Specifications of C741KP/C743KP series code access

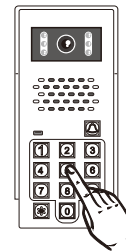

### ⚠ ATTENTION

- 1: Input a 4 Digit Password To Have The Door Striked Or The Lock Unlocked.
- 2: The Original Factory Defaulted Password Is \*1234.

5

## KEYPAD COMMAND (C743KP C741KP)

Default master code:1234

Entering programming mode

- 1:Press the \* then 4 digit master code
- 2:If successful three tones will sound and the LED will flash

Adding user codes

- 1:Enter programming mode
- 2:Input the code 01-31 for normal operation,  
32-40 for latching mode.
- 3:Enter the 4 digit code,if successful three tones sound  
if not 2 tones sound.
- 4:Press \* to exit

Deleting a user code

- 1:Enter programming mode
- 2:Enter code 01-40
- 3:Press # to delete code
- 4:If successful three tones will sound
- 5:Press \* to exit

Deleting a code from an unknown code

- 1:Enter programming mode
- 2:Press # two tones will sound
- 3:Input 4 digit code to be deleted
- 4:Three tones will sound if successful
- 5:Press \* to exit

Deleting all codes

- 1:Enter programming mode
- 2:Press # two tones will sound
- 3:Press # again to hear a further two tones
- 4:Press # seven times to default all codes and settings  
(the master code will remain)
- 5:The system will resume after five seconds and tones

Changing the master code


- 1:Down power the unit
- 2:Hold \* and power up the unit, a long tone will sound
- 3:When the tone stops ,a short tone will sound and input  
the new 4 digit programming code

Set the lock time


- 1:Enter programming
- 2:Enter 00
- 3:Enter the lock/delay operation time (01-99 seconds)
- 4:Press \* to exit

## INDOOR MONITOR

### ■ M741W

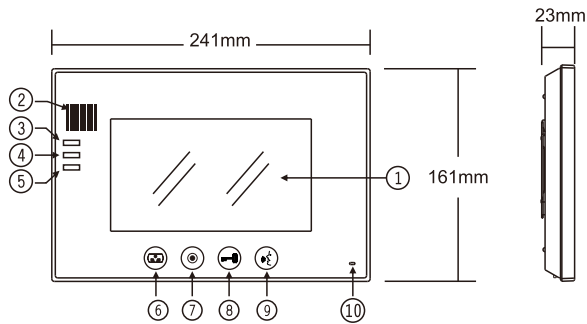

### ■ M741MW

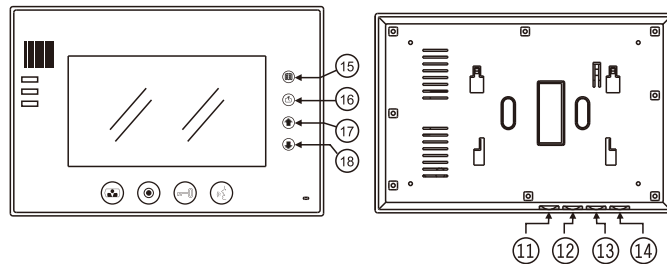

8



NO.	Function	NO.	Function
①	TFT	⑩	Microphone
②	Speaker	⑪	Brightness
③	Power and talking indicator	⑫	Chroma
④	Door 1 calling indicator	⑬	Volume
⑤	Door 2 calling indicator	⑭	Ring adjust
⑥	Monitor(Touch button)	⑮	<b>Enter the menu</b>
⑦	Calling(Touch button)	⑯	<b>Exit</b>
⑧	Unlock(Touch button)	⑰	Page up
⑨	Talking(Touch button)	⑱	Page down

### ► Specification

Working condition	Temperature: -10 ~ +55℃
	RH ≤ 95%
Voltage	DC14.5V
Standby current	≤ 50mA
Working current	≤ 600mA
Mode	Dual transmission
Talking time	2 minutes

9

## ► Wiring diagram

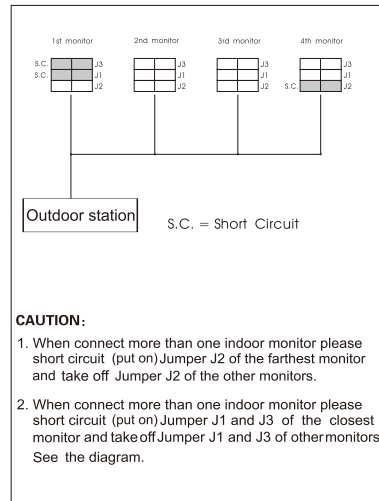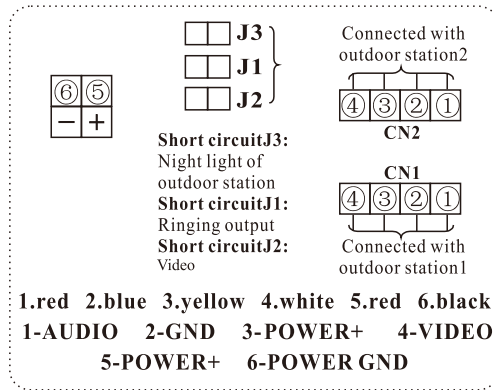

## ► Installation instruction




1. The installation place should be faraway from TV, video record player, PC etc. Electronic units with high intensity EMC.
2. Do not drop, knock or shake the unit.
3. Shut down the power for the unit while installing.
4. The wiring cable installation should keep 30 cm away from the high voltage cable as minimum distance, reducing the disturb from high voltage.
5. Before take power for the unit, recheck the wiring diagram and make sure done right connection.
6. Meet with unnormal phenomenon when the unit is working, cut down the power first and then do eliminate of defects.
7. Eliminate of defects after shut down the power, do check step by step from one unit to another unit, or do cross-test that means take substitute(a new one). After done above processings, if still has unknown defect, contact with our company for after service. Nonexpertive handing may damage the unit.

### Installation processes

1. Position the location when the unit is to be mounted. Use the bracket to mark the accurately location point.
2. Use the screw anchors to fill the drilling hole, and screwing fasten the bracket to the wall.
3. According to the wiring diagram and do right connection.
4. Mounted the unit to the bracket.

### Installing diagram

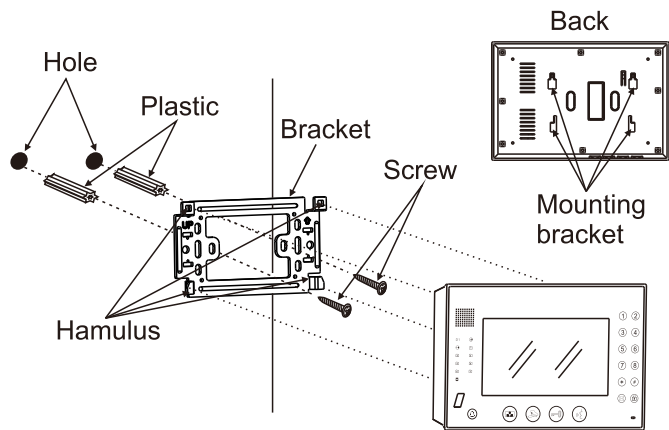


### INSTRUCTION:

1. Cables of requirement:  
Diameter  $\geq 0.5\text{mm}^2$ , from outdoor station to the farthest monitor distance  $\leq 70\text{m}$ .
2. Each monitor should be parallel connected. One monitor can be extended 3 monitors as maximum extension. One monitor can be connected 2 outdoor stations as maximum.

### CONFIGURATION DIAGRAM

- WITH TWO ENTRANCE  
Indoor monitor external power supply

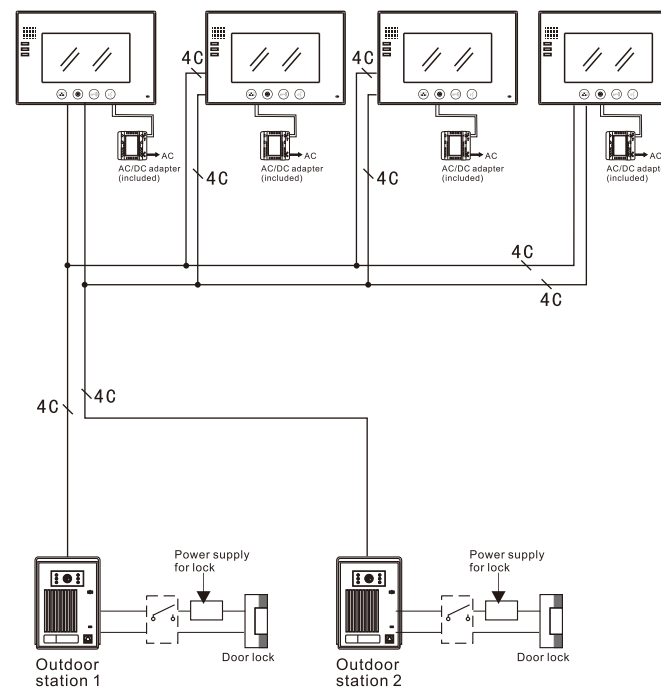




## SYSTEM DIAGRAM




### ► Wiring connections

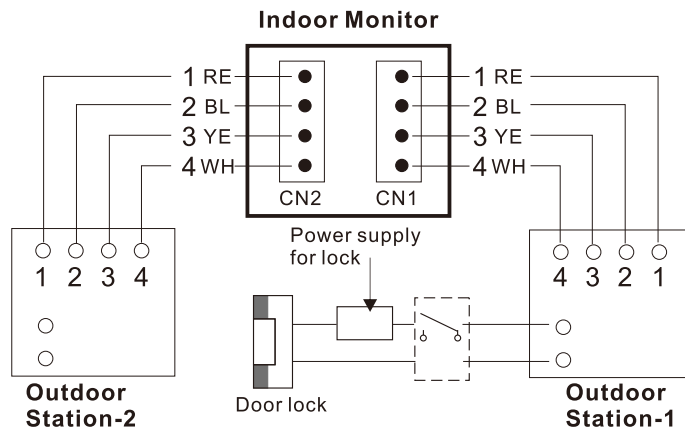1. Red 2. Blue 3. Yellow 4. White  
 1-Audio 2-GND 3-Power+ 4-Video




## OPERATION

### ► Visitor calling

Visitor press the call button of outdoor station, all indoor monitor showing the indicator of the outdoor station position and ringing, and visitor image on the indoor monitor display panel. Press the button  of any indoor monitor, start talking, same time, other indoor monitor can press the button  achieve to third-party call, repress the button  of any indoor monitor close the talking and all display of all indoor monitor closed. Max talking time lasts 2 minutes, no answer, calling last 1 minutes. One-one talking mode, means one indoor monitor talk to one outdoor station, other indoor monitors will just show the visitor, at same time, press the call button from other outdoor station, one-one talking will cut, and the latest called outdoor station start talking to the indoor monitor. Corresponding indicator flashing in case outdoor station calling.




### ► Unlocking


Calling from outdoor station to indoor monitor, the indoor monitor will be ringing and talking indicator LED on, the visitor's image will be displayed on the screen. Press the button  for unlocking the door.

In monitoring mode, press the button  for unlocking the door.

### ► Monitoring



---

In standby mode, press the button  , meanwhile Door 1 indicator of indoor monitor flashing and showing the scenery of Door 1 outdoor station's camera. Press the button  again, will show scenery of Door 2 outdoor station's camera. Press the button  third time, close monitoring. Without the third press, monitoring will be closed in 1 minutes automatically.

In monitoring mode, press the button  on indoor monitor can start audio monitoring. Monitoring mode last 1 minutes and each indoor monitor independently of each other.

### ► Indoor monitor call transferring

---

In case press the call button on outdoor station, all indoor monitor ring, can be pressed any indoor monitor button  for talking, also can be pressed the button forward the calling for other indoor monitor, the indoor monitor you pressed the button  close the talking and standby.

### Notes:

1. In this system, in case be connected multi-indoor monitors, just the farthest indoor monitor jumper J2 need put ON, others' keep default setting.
2. Put on jumper J1 the outdoor station has ringing tone, or else, has no voice.
3. Put on jumper J3 means the outdoor station nightlight on, or else, nightlighting function closed.

## Picture memory function

---

For the model with 100 pictures stored

### Auto capture

---

When the outdoor station calls the indoor monitor, one picture will be captured in the 3rd second. It only captures one picture automatically (Do not support automatic continuity capture).








### NOTICE

Maximum storage: 100 pictures. After the number reaches 100, the oldest picture will be deleted automatically as long as a new picture is captured.

If there are new pictures without read, picture indicator is on. After the pictures are read, the picture indicator will be off.





### Check picture


---

Press  and  directly to enter the picture review window. Then press  and  to choose the pictures up and down. Press  to exit. The indoor monitor will automatically return to the standby state in 10 seconds.


## Delete picture

---

In the standby mode, press  as Picture 1. Press  to choose. Choose delete all as Picture 2. Press  or  to delete all stored pictures.

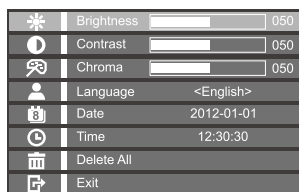



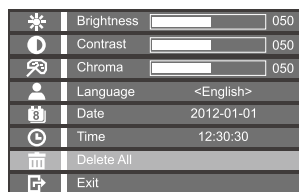

Picture 1



Picture 2






## Brightness adjustment

---

In the standby mode, press  as Picture 1. Then press  or  to adjust the brightness. Range of brightness: 0-100. After the setting, press  to exit.






## Contrast adjustment

---

In the standby mode, press  as Picture 1. Then press  to choose Contrast, press  or  to adjust the contrast. Range of contrast: 0-100. After the setting, press  to exit.






## Chroma adjustment

---

In the standby mode, press  as Picture 1. Then press  to choose Chroma. Press  or  to adjust the Chroma. Range of colour: 0-100. After the setting, press  to exit.








## Language setting

---

In the standby mode, press  as Picture 1. Then press  to choose Language. Press  or  to adjust the language. After the setting, press  to exit.












## Date setting

---





In the standby mode, press  as picture 1. Then press  to choose Date (Date displays: year-month-date). Press  or  to adjust the year. After year is adjusted, press  to switch to month. After month is adjusted, press  to switch to date. After the setting, press  to exit.

## Time setting






---

In the standby mode, press  as picture 1. Then press  to choose Time (Time displays: hour : minute : second). Press  or  to adjust the hour. After hour is adjusted, press  to switch to minute. Press  or  to adjust the minute. After minute is adjusted, press  to switch to second. Press  or  to adjust the second. After the setting, press  to exit.

## Exit the setting mode

In the setting mode, press  , choose Exit, press  or  to exit. Or in the setting mode, press  to exit directly. Or it will automatically exit without any operation in 10 seconds.

## Notice
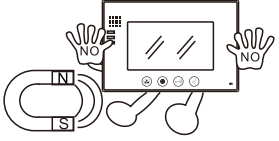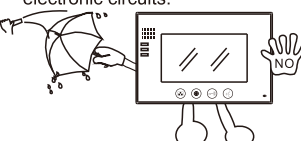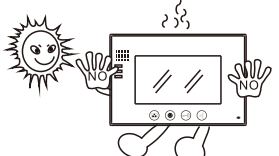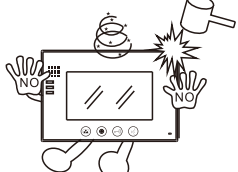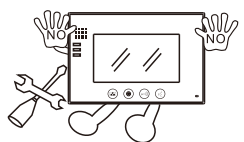
<p>1. Do not put the unit near the magnetic area such as television, video recorder etc.</p> 	<p>2. Keep the unit dry, humidity and all types of liquids or moisture contains mineral that will corrode electronic circuits.</p> 
<p>3. Do not put the unit in hot areas. high temperatures can shorten the life of electronic device.</p> 	<p>4. Do not drop, knock or shake the unit.</p> 
<p>5. Do not attempt to open the unit. Nonexpert handing may damage the unit.</p> 	<p>6. Do not use the wet dishcloth or the volatile cleansers to clean it.</p> 